

Care Instructions

Ensure the longevity and appearance of your ELLISON STUDIOS. timber furniture with these care instructions:

- Use a soft, dry cloth regularly to prevent the build-up of dirt and grime.
- Clean with a damp cloth and mild soap solution, wiping in the direction of the wood grain. Avoid excessive water. Recommended products are available in the ELLISON STUDIOS. online store.
- Position furniture away from windows or use curtains to prevent fading and discoloration.
- Maintain a stable environment to avoid warping or cracking.
- Blot spills immediately with a clean, dry cloth. Consult specific care instructions for tougher stains.
- Periodically polish with recommended products from the ELLISON STUDIOS. online store.
- Refrain from using abrasive cleaners or harsh chemicals.

Following these simple steps and guidelines will help to ensure the longevity of your ELLISON STUDIOS. product.

ELLISON STUDIOS.

ELLISON STUDIOS.

Product Care & Assembly Guide

Congratulations on your purchase of your ELLISON STUDIOS Arch Timber Dining Chair. This document lists the contents included in your delivery.

Please take the time to read this document, as it includes important information about caring for your product as well as any assembly instructions that might be required. As you unpack your new item, place the contents on a carpeted or padded area to protect them from damage before placing the product in its final position.

ARCH TIMBER DINING CHAIR

Hardware


None

Tools Required

None

Assembly Guidance

1 Person Minimum | Fully Assembled

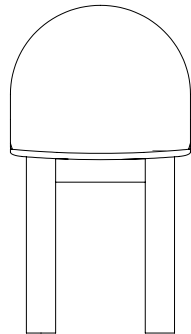

Contact Us

For Australian warranty related queries please contact:

customerservice@ellisonstudios.com

For any international customer service inquiries please contact the retailer of purchase.

Ellison Studios Group Pty Ltd
