

Care Instructions

Ensure the longevity and appearance of your ELLISON STUDIOS. timber furniture with these care instructions:

- Use a soft, dry cloth regularly to prevent the build-up of dirt and grime.
- Clean with a damp cloth and mild soap solution, wiping in the direction of the wood grain. Avoid excessive water. Recommended products are available in the ELLISON STUDIOS. online store.
- Position furniture away from windows or use curtains to prevent fading and discoloration.
- Maintain a stable environment to avoid warping or cracking.
- Periodically polish with recommended products from the ELLISON STUDIOS. online store.
- Refrain from using abrasive cleaners or harsh chemicals.
- Regularly check and tighten hardware and ensure they are secure.

Following these simple steps and guidelines will help to ensure the longevity of your ELLISON STUDIOS. product.

ELLISON STUDIOS.

ELLISON STUDIOS.

Product Care & Assembly Guide

Congratulations on your purchase of your ELLISON STUDIOS. Contour Shelving. This document lists the contents included in your delivery.

Please take the time to read this document, as it includes important information about caring for your product as well as any assembly instructions that might be required. As you unpack your new item, place the contents on a carpeted or padded area to protect them from damage before placing the product in its final position.

CONTOUR SHELVING

Hardware


- A. Anti-Tip Cables x2
- B. Flat Washers x4
- C. M4 Screw x4

Tools Required

- Screwdriver (not supplied)
- Measuring Tape (not supplied)

Assembly Guidance

2 Person Minimum | 15 Minute Assembly

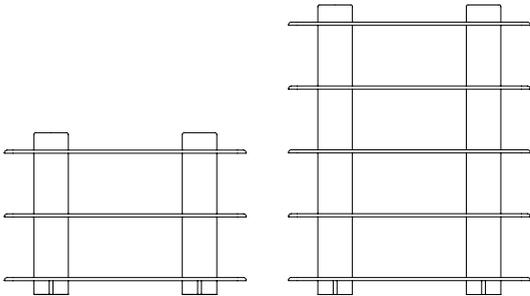


Contact Us

For Australian warranty related queries please contact:
customerservice@ellisonstudios.com
For any international customer service inquires please contact the retailer of purchase.
Ellison Studios Group Pty Ltd

ELLISON STUDIOS.


Step 1

Position the Contour Shelf upright in its final location. Attach 1x anti-tip cable (A) to the top shelf using the 1x washer (B) and 1x M4 screw (C). Tighten until secure, ensuring the cable is seated flat against the underside of the shelf. Repeat this step on the opposite side.

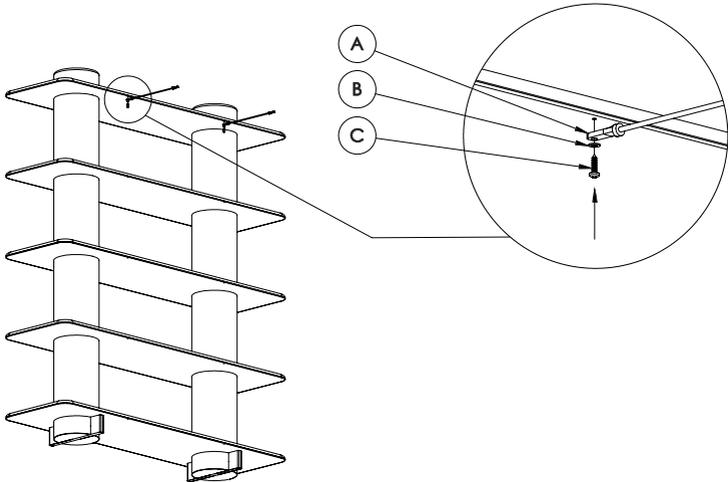

Step 2

Fix the opposite end of the anti-tip cable (A) using 1x washer (B) and 1x M4 screw (C) to the wall using appropriate fixings for your wall type. Adjust the cable so it is taut and evenly tensioned, then fully tighten all fixings. Ensure the shelving unit sits level and is stable before use.

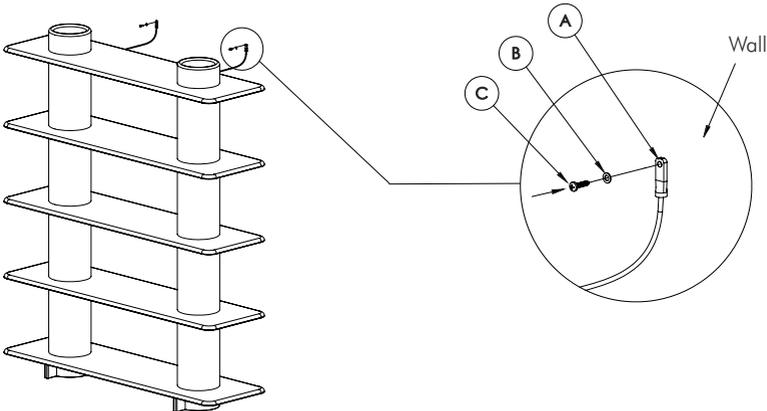

Blank Page