

# ELLISON STUDIOS.

## Product Care & Assembly Guide

Congratulations on your purchase of your ELLISON STUDIOS. item. This document lists the contents included in your delivery.

Please take the time to read this document, as it includes important information about caring for your product as well as any assembly instructions that might be required. As you unpack your new item, place the contents on a carpeted or padded area to protect them from damage before placing the product in its final position.


### ISOLA COFFEE TABLE

#### Hardware

- A. M8x30 Bolts x9
- B. M8 Washers x9

#### Tools Required

Allen key (Provided)

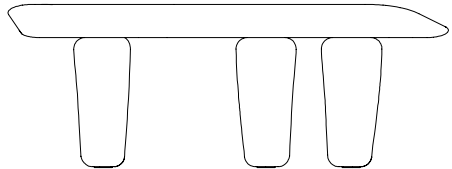

#### Assembly Guidance

2 Person Minimum | 30 Minute Assembly

#### Contact Us

For Australian warranty related queries please contact:

[customerservice@ellisonstudios.com](mailto:customerservice@ellisonstudios.com)

For any international customer service inquiries please contact the retailer of purchase.

Ellison Studios Group Pty Ltd


---

# ELLISON STUDIOS.

---


## Step 1

Open box carefully, ensuring the blade of the knife does not come into contact with the product. Lift the product out of box and place the table top face down onto a clean, flat surface (we recommend using a towel or sheet underneath for protection). Gently position the legs in place with the corresponding holes.

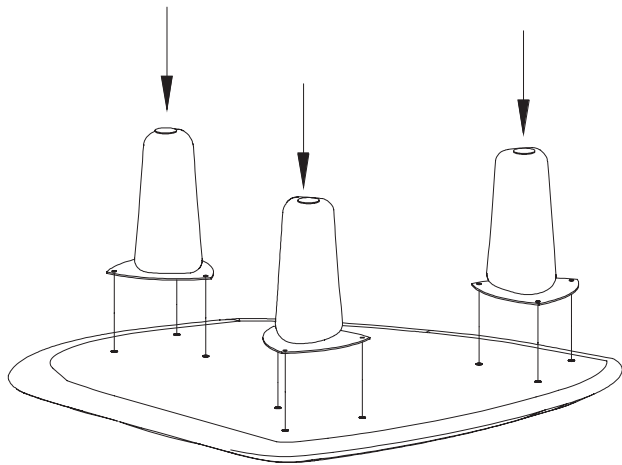


## Step 2

Using the Allen Key, fasten the legs securely with 6x Bolts (A) and 6x Washers (B) provided. Repeat this step for the remaining Legs.

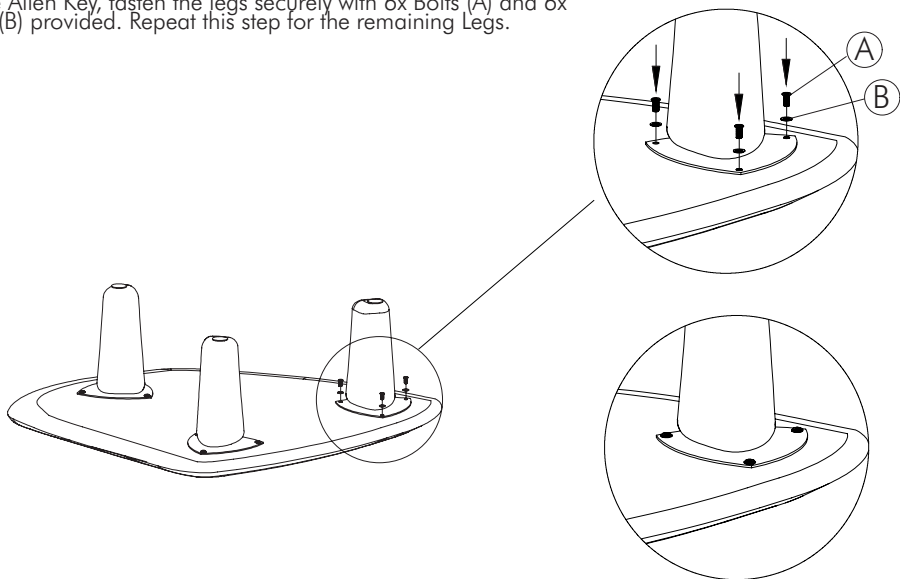

**Step 3**

Carefully turn the table over (2 persons are recommended). When lifting and flipping your table to be the correct way up, do not use the legs as a tilting point. Their connection to the table top is not designed to be a leverage point and the level of load through this joint may cause the legs to be damaged or break.

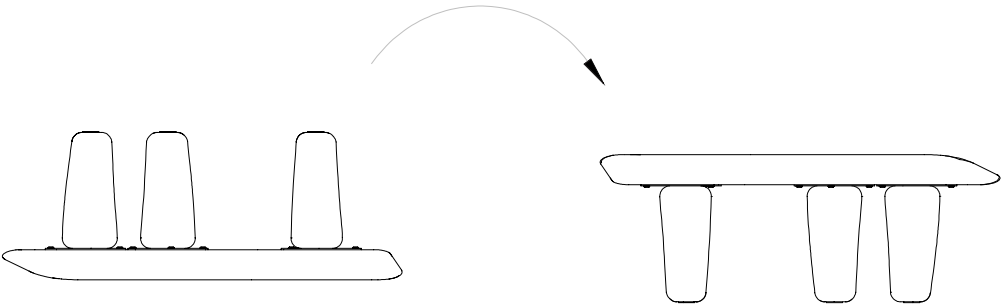

## Care Instructions

Ensure the longevity and appearance of your ELLISON STUDIOS. furniture and homewares products with these care instructions:

- Use a soft, damp cloth to clean surface regularly. For stubborn stains, use a mild soap solution. Avoid harsh chemicals
- or abrasive cleaners, as they can damage the finish.
- Use a soft cloth or duster to remove dust from surfaces regularly. This helps prevent dirt buildup, which can lead to damage over time.
- To prevent scratching or damage, avoid placing sharp objects directly on furniture surfaces. Use coasters or mats under items that may cause damage.
- When not in use, use furniture covers if necessary and put away from harsh environmental factors to ensure the continue to last for a long time.

Following these simple steps and guidelines will help ensure the longevity of your ELLISON STUDIOS. product.

# ELLISON STUDIOS.