

# ELLISON STUDIOS.

## Product Care & Assembly Guide

Congratulations on your purchase of your ELLISON STUDIOS. Trim Mirror. This document lists the contents included in your delivery.

Please take the time to read this document, as it includes important information about caring for your product as well as any assembly instructions that might be required. As you unpack your new item, place the contents on a carpeted or padded area to protect them from damage before placing the product in its final position.

### TRIM FLOOR LEANING MIRROR

#### Hardware


- |    |               |    |
|----|---------------|----|
| A. | L-Hook Screw  | x1 |
| B. | M4 Washer     | x2 |
| C. | M4x15mm Screw | x2 |
| D. | Wall Anchor   | x3 |

#### Tools Required

Screwdriver (Not Supplied)

#### Assembly Guidance

Professional Installation Required

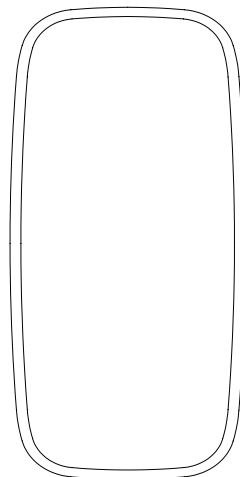

#### Contact Us

For Australian warranty related queries please contact:

[customerservice@ellisonstudios.com](mailto:customerservice@ellisonstudios.com)

For any international customer service inquiries please contact the retailer of purchase.

Ellison Studios Group Pty Ltd

---


# ELLISON STUDIOS.

## Step 1

Warning: We strongly recommend that the following steps be carried out by a professional.


Place the mirror where you wish to hang/lean. Mark on the where the wall screw anchor falls in respect to the D-ring. Drill a pilot hole on the marked spot, this will house the wall anchor (D). Insert the wall anchor into the drilled hole.

Screw in the the L-hook screw into the anchor. Ensure that once fastened that the hook is pointing towards the ceiling.

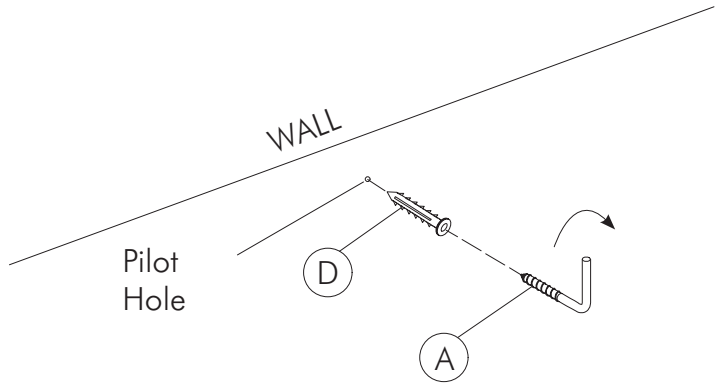

## Step 2

Lift the mirror into place with the assistance of another person and check that the wall hook is in the correct location, with the D-ring secured over the L-hook screw (A).

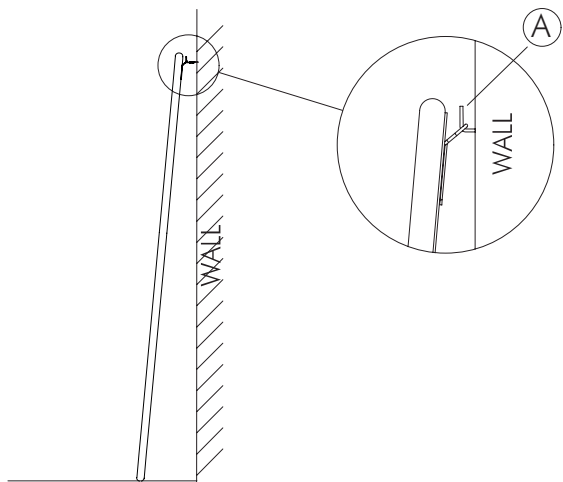


# ELLISON STUDIOS.

## Step 3

Drill a pilot hole to house the remaining wall anchors (D). Insert wall anchors (D) into the pilot hole.

Fasten the wall mounting lanyard into the wall anchor (D) using washer (B) and screw (C) as shown in the diagram below.

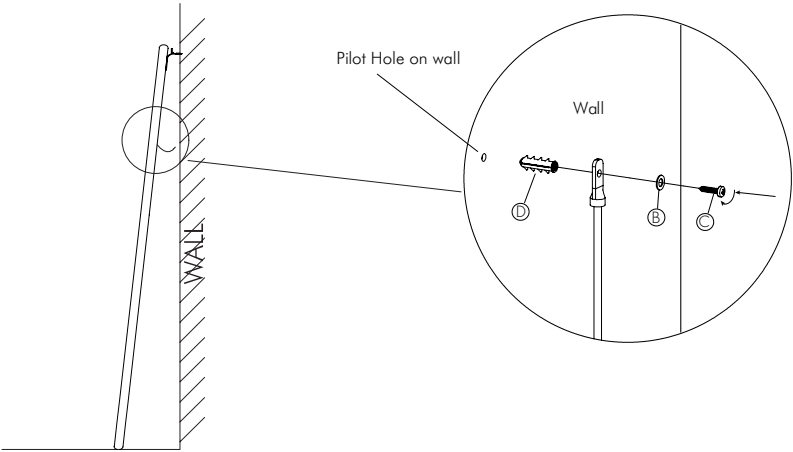

## Care Instructions

Ensure the longevity and appearance of your ELLISON STUDIOS. furniture and homewares products with these care instructions:

- Use a soft, damp cloth to clean surfaces regularly. For stubborn stains, use a mild soap solution. Avoid harsh chemicals or abrasive cleaners, as they can damage the finish.
- Use a soft cloth or duster to remove dust from surfaces regularly. This helps prevent dirt buildup, which can lead to damage over time.
- To prevent scratching or damage, avoid placing sharp objects directly on furniture surfaces.
- When not in use, use furniture covers if necessary and put away from harsh environmental factors to ensure they continue to last for a long time.

Following these simple steps and guidelines will help to ensure the longevity of your ELLISON STUDIOS. product.

# ELLISON STUDIOS.