

Care Instructions

Ensure the longevity and appearance of your ELLISON STUDIOS. furniture and homewares products with these care instructions:

- Use a soft, damp cloth to clean timber surface regularly. For stubborn stains, use a mild soap solution. Avoid harsh chemicals or abrasive cleaners, as they can damage the finish.
- Use a soft cloth or duster to remove dust from surfaces regularly. This helps prevent dirt buildup, which can lead to damage over time.
- To prevent scratching or damage, avoid placing sharp objects directly on furniture surfaces.
- Vacuum upholstered surfaces regularly using a soft brush attachment. This helps remove dust and debris and maintains the appearance of the fabric.
- Avoid prolonged exposure to direct sunlight. Extended exposure may cause fading of upholstery and changes to the timber finish over time.

Following these simple steps and guidelines will help ensure the longevity of your ELLISON STUDIOS. product.

ELLISON STUDIOS.

ELLISON STUDIOS.

Product Care & Assembly Guide

Congratulations on your purchase of your ELLISON STUDIOS. Nico Occasional Chair. This document lists the contents included in your delivery.

Please take the time to read this document, as it includes important information about caring for your product as well as any assembly instructions that might be required. As you unpack your new item, place the contents on a carpeted or padded area to protect them from damage before placing the product in its final position.

NICO OCCASIONAL CHAIR

Hardware


None

Tools Required

None

Assembly Guidance

2 Person Minimum | Fully Assembled

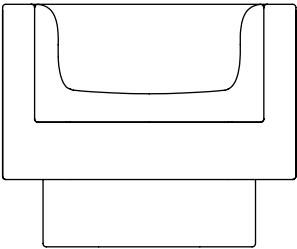

Contact Us

For Australian warranty related queries please contact:

customerservice@ellisonstudios.com

For any international customer service inquiries please contact the retailer of purchase.

Ellison Studios Group Pty Ltd
