

## Care Instructions

Ensure the longevity and appearance of your ELLISON STUDIOS. furniture and homewares products with these care instructions:

- Use a soft, damp cloth to clean surfaces regularly. For stubborn stains, use a mild soap solution. Avoid harsh chemicals or abrasive cleaners, as they can damage the finish.
- Use a soft cloth or duster to remove dust from surfaces regularly. This helps prevent dirt buildup, which can lead to damage over time.
- To prevent scratching or damage, avoid placing sharp objects directly on furniture surfaces.
- When not in use, use furniture covers if necessary and put away from harsh environmental factors to ensure they continue to last for a long time.

Following these simple steps and guidelines will help to ensure the longevity of your ELLISON STUDIOS. product.

# ELLISON STUDIOS.

# ELLISON STUDIOS.

## Product Care & Assembly Guide

Congratulations on your purchase of your ELLISON STUDIOS. Trim Mirror. This document lists the contents included in your delivery.

Please take the time to read this document, as it includes important information about caring for your product as well as any assembly instructions that might be required. As you unpack your new item, place the contents on a carpeted or padded area to protect them from damage before placing the product in its final position.


### TRIM 82 x 99 WALL MIRROR

#### Hardware

- A. Plastic Screw Anchor x4
- B. Wall Hook Screw x4

#### Tools Required

Power drill (not supplied)  
Screwdriver (not supplied)  
Measuring Tape (not supplied)

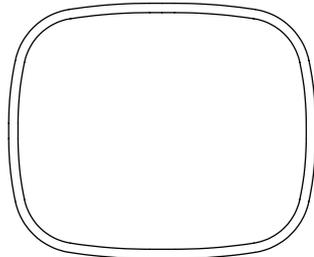

#### Assembly Guidance

Professional Installation Required | 15 Minute Assembly

#### Contact Us

For Australian warranty related queries please contact:

[customerservice@ellisonstudios.com](mailto:customerservice@ellisonstudios.com)

For any international customer service inquires please contact the retailer of purchase.

Ellison Studios Group Pty Ltd


---

# ELLISON STUDIOS.

## Step 1


Holding the mirror in place, determine where you wish to hang/lean your mirror and mark on the wall where the wall screw anchor should be inserted. Drill a hole into the wall to house the plastic screw anchor. A pilot hole is recommended to be drilled for installation.

Insert the plastic screw anchor (A) and tighten until flush with the wall surface. Screw the provided wall hook screw anchor (B) clockwise into the plastic screw anchor until tight and secure. The hook should be pointing towards the ceiling.

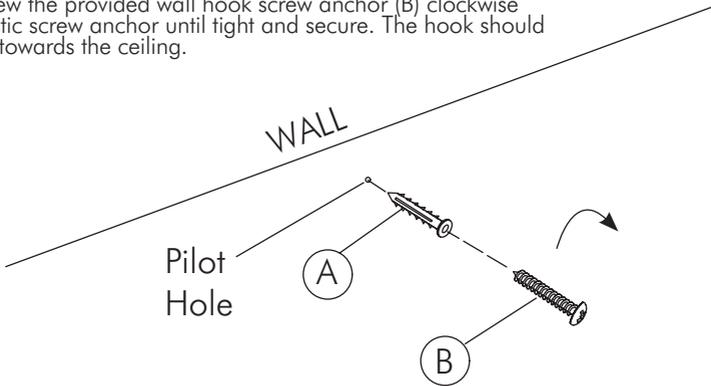

## Step 2

Using brackets on the rear of the mirror, attach the mirror to the screws installed on the wall.

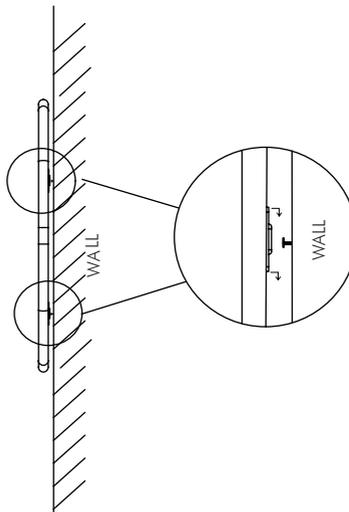

Blank Page