

Care Instructions

Ensure the longevity and appearance of your ELLISON STUDIOS. fabric upholstered furniture with these care instructions:

- Vacuum periodically with an upholstery attachment to remove dust and debris. Blot spills immediately with a clean, dry cloth. Follow specific care instructions for stubborn stains.
- Minimize exposure to direct sunlight to prevent fading and deterioration.
- Avoid placing sharp objects on or near the furniture to prevent snags and tears.
- Use protective felt pads under the legs to prevent scratches on floors.
- Do not use abrasive cleaners or harsh chemicals. Refer to specific care instructions for your fabric type.
- Consider professional cleaning services every 12-18 months.
- Use fabric protection sprays safe for your upholstery. Recommended products are available in the ELLISON STUDIOS. online store.

Following these simple steps and guidelines will help to ensure the longevity of your ELLISON STUDIOS. product.

ELLISON STUDIOS.

ELLISON STUDIOS.

Product Care & Assembly Guide


Congratulations on your purchase of your ELLISON STUDIOS. Melt Bed. This document lists the contents included in your delivery.

Please take the time to read this document, as it includes important information about caring for your product as well as any assembly instructions that might be required. As you unpack your new item, place the contents on a carpeted or padded area to protect them from damage before placing the product in its final position.

MELT QUEEN BED- FIXED

Hardware

A.	5/16"-18x1" Bolt	x32
B.	5/16"-18x2" Bolt	x12
C.	5/16"x11/16" Flat Washer	x44
D.	5/16"x7/8" Flat Washer	x4
E.	5/16" Spring Washer	x44
F.	5/32"-24x1-1/5" Screw	x48
G.	5/16"x3/8" Threaded Shaft	x4
H.	5/16"x1/2" Long Hex Nut	x4
I.	5/16" Spring Washer	x4
J.	Lock Washer	x5
K.	Corner Bracket	x4

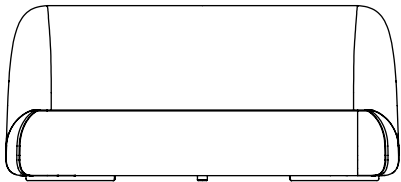

Tools Required

Allen Key
Screwdriver (not supplied)

Assembly Guidance


2 Person Minimum | 1 Hour Assembly

Contact Us

For Australian warranty related queries please contact:
customerservice@ellisonstudios.com
For any international customer service inquires please contact the retailer of purchase.
Ellison Studios Group Pty Ltd


ELLISON STUDIOS.

Please follow the assembly instructions carefully to ensure correct installation.
Some holes will remain unused after assembly

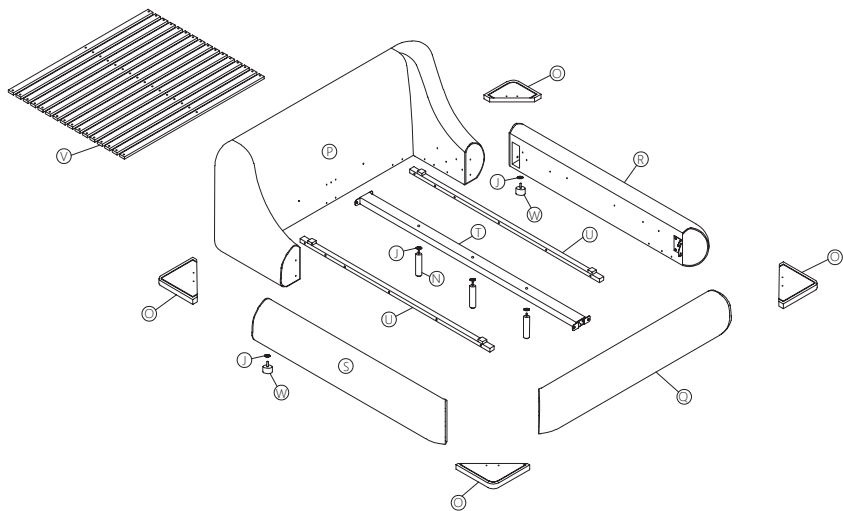

Step 1


Lay the headboard (P) on a clean, flat surface.
Insert 4x threaded shafts (G) into the headboard (P) as shown on the diagram below.

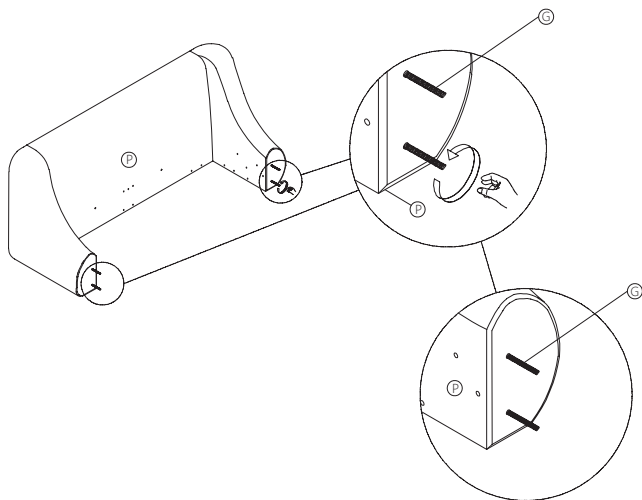

ELLISON STUDIOS.


Step 2

Lay the side rail (R) on a clean, flat surface. Securely fasten 1x support leg (W) and lock washer (J) onto side rail (R) as shown on the diagram below. Then repeat this step for side rail (S).

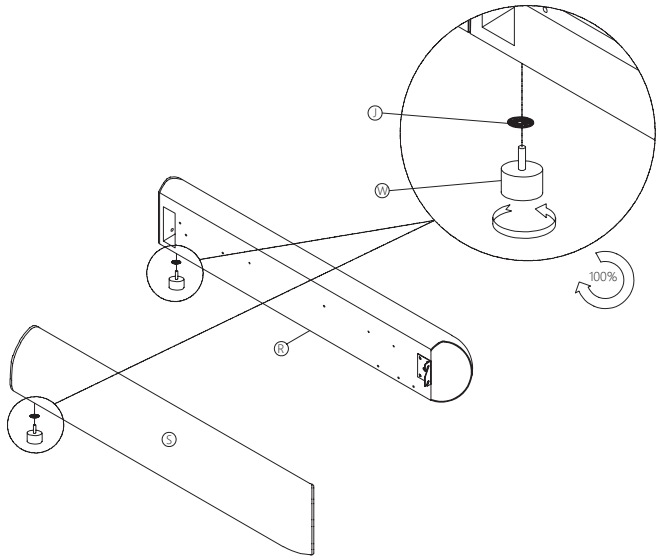

Step 3


Assemble the side rail (R) onto the headboard (P) as shown. Ensure the threaded shafts protrude through the holes found on the side rail. Repeat this step for the remaining side rail.

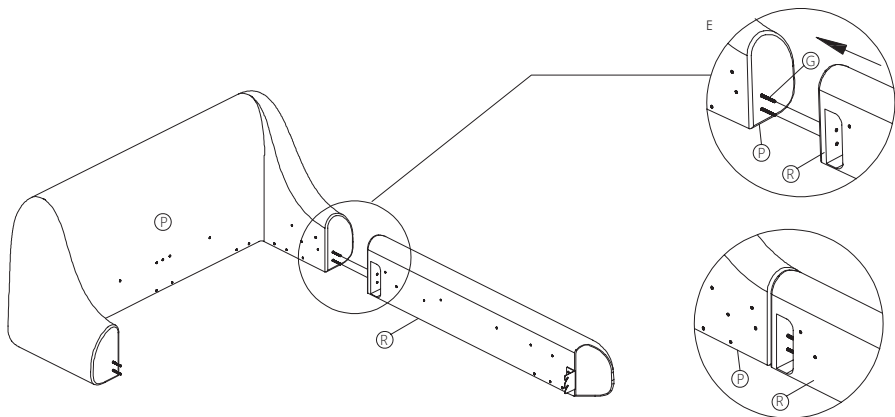

ELLISON STUDIOS.


Step 4

Secure side rail (R) to headboard (P) by sliding 2x flat washer (D), 2x spring washer (I) and 2x long hex nut (H) onto the exposed threaded shafts, then fully tighten.
Repeat this step on the other side rail.

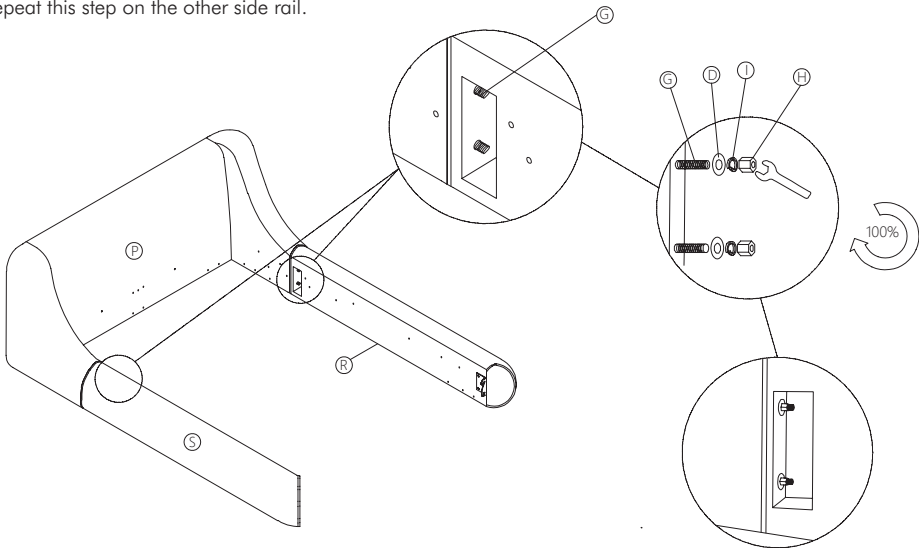

Step 5


Attach the foot rail (O) to the assembled side rails (R) and (S) using 4x bolt (A), 4x spring washer (E) and 4x flat washer (C). Fasten bolts to about 80%.
Once all components are aligned, continue to tighten bolts to 100%.

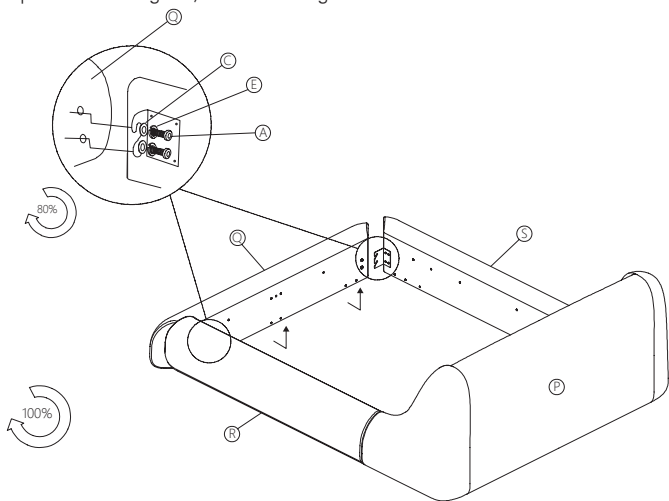

Step 6

Attach the brace (U) to headboard (P) and side rail (R) securely in the orientation shown below using 6x bolt (B).


(B), 6x spring washer (E) and 6x flat washer (C). Repeat this step for side rail (S).

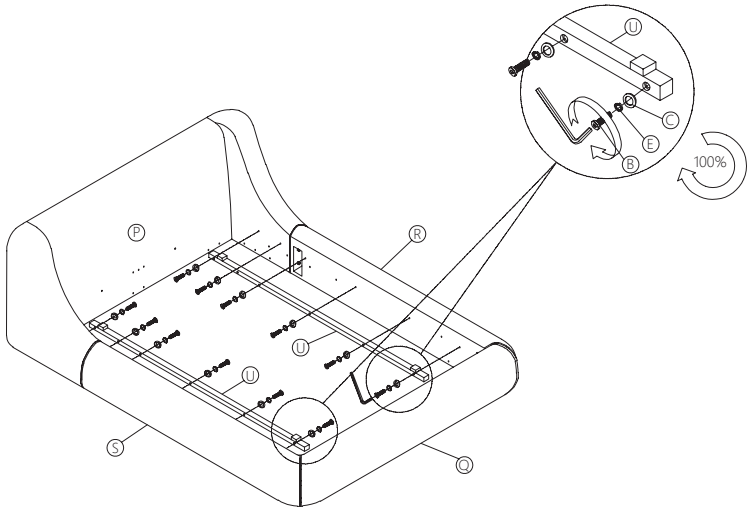

Step 7

Firstly, fasten corner bracket (K) to foot (O) to 100% using 2x bolt (A), 2x spring washer (E), and 2x flat washer (C). Then attach the complete foot assembly into the corner of the bed frame as shown in the diagram.

Fasten bolts to about 80% using 4x bolt (A), 4x spring washer (E) and 4x flat washer (C). Once all feet are aligned, tighten bolts to 100%.

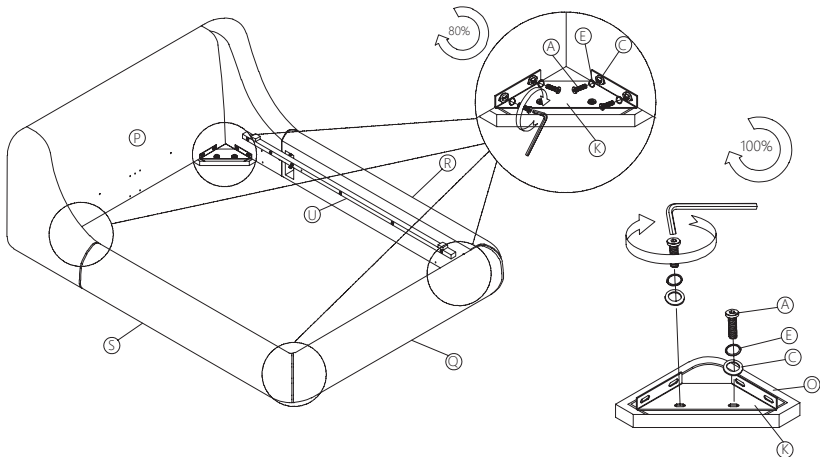


ELLISON STUDIOS.

Step 8


Securely fasten all legs (N) and lock washers (J) onto the center rail (T) as shown in the diagram below.

Note that the foot can be adjusted to level the bed on uneven floors.

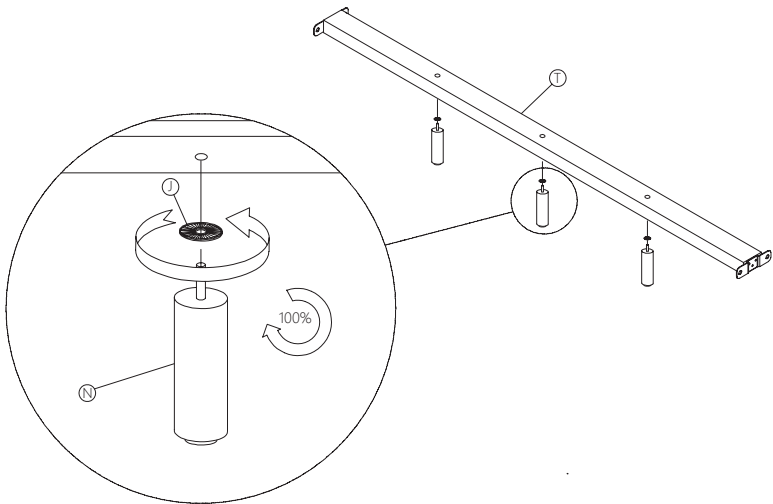

Step 9

Next, attach center rail (T) onto headboard (P) and foot rail (Q) using 4x bolt (A), 4x spring washer (E) and 4x flat washer (C). Tighten the bolts to 100%

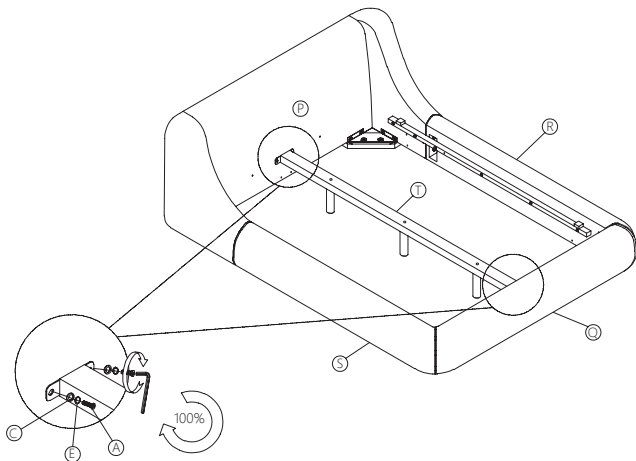


ELLISON STUDIOS.

Step 10

Unroll the bed slats (M) across the bed frame from end to end.

Using a screwdriver, secure each slat by inserting 48x screw (F) into the pre-drilled pilot holes along the slats.

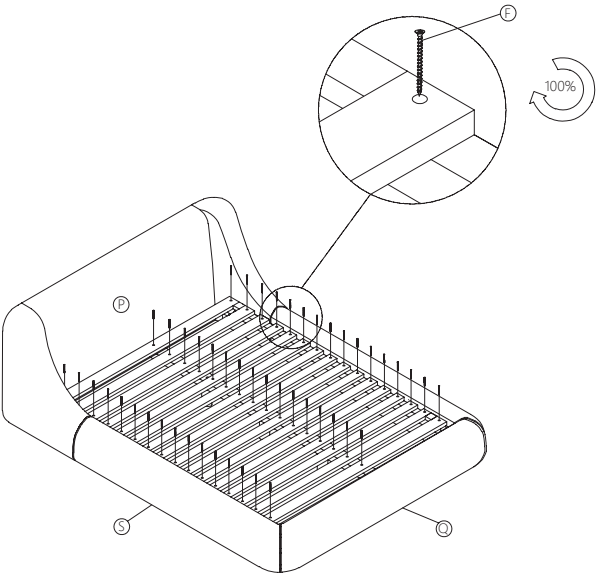

Step 11

Assembly complete.

