

Care Instructions

Ensure the longevity and appearance of your ELLISON STUDIOS. fabric upholstered furniture with these care instructions:

- Vacuum periodically with an upholstery attachment to remove dust and debris. Blot spills immediately with a clean, dry cloth. Follow specific care instructions for stubborn stains.
- Minimise exposure to direct sunlight to prevent fading and deterioration.
- Regularly fluff cushions to ensure even wear and maintain shape.
- Avoid placing sharp objects on or near the furniture to prevent snags and tears.
- Do not use abrasive cleaners or harsh chemicals. Refer to specific care instructions for your fabric type.
- Consider professional cleaning services every 12-18 months.
- Use fabric protection sprays safe for your upholstery. Recommended products are available in the ELLISON STUDIOS. online store.

Following these simple steps and guidelines will help to ensure the longevity of your ELLISON STUDIOS. product.

ELLISON STUDIOS.

ELLISON STUDIOS.

Product Care & Assembly Guide


Congratulations on your purchase of your ELLISON STUDIOS. Rem Bed. This document lists the contents included in your delivery.

Please take the time to read this document, as it includes important information about caring for your product as well as any assembly instructions that might be required. As you unpack your new item, place the contents on a carpeted or padded area to protect them from damage before placing the product in its final position.

REM QUEEN BED

Hardware

- | | | |
|----|--------------------------|-----|
| A. | 5/16"x2" Bolt | x26 |
| B. | 5/32"-24x1-1/5" Screw | x48 |
| C. | 5/16" Spring Washer | x30 |
| D. | 5/16"x 7/8" Flat Washer | x70 |
| E. | 5/16"x11/16" Flat Washer | x4 |
| F. | Locker Washer | x3 |

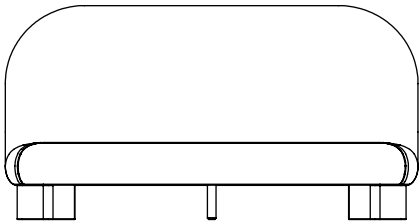

Tools Required

Allen Key (Supplied)
Screwdriver (Not Supplied)

Assembly Guidance

2 Person Minimum | 1 Hour Assembly

Contact Us


For Australian warranty related queries please contact:
customerservice@ellisonstudios.com

For any international customer service inquiries please contact the retailer of purchase.
Ellison Studios Group Pty Ltd

ELLISON STUDIOS.


Step 1

Assemble the timber frame as shown below.
No hardware fastening for this step; lay out and join timber frame pieces together.

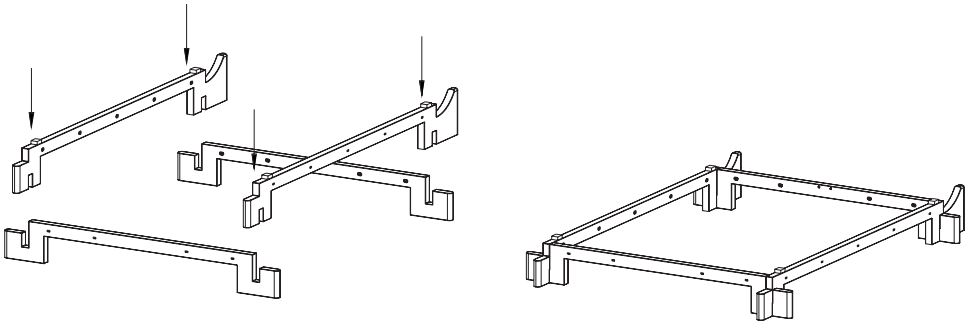

Step 2

Lower the headboard onto the timber frame.
Align the mounting holes on the headboard with the pre-drilled holes on the timber frame.

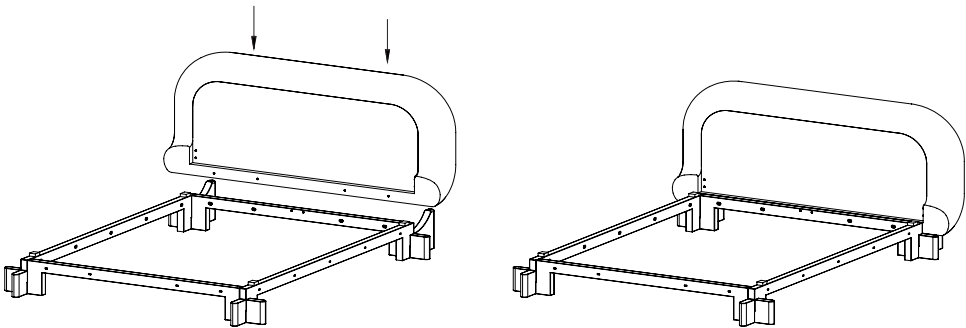


ELLISON STUDIOS.

Step 3

Attach the headboard to the timber frame using 4x bolt (A), 4x spring washer (C) and 4x flat washer (D).


Fasten the bolts to about 80%.

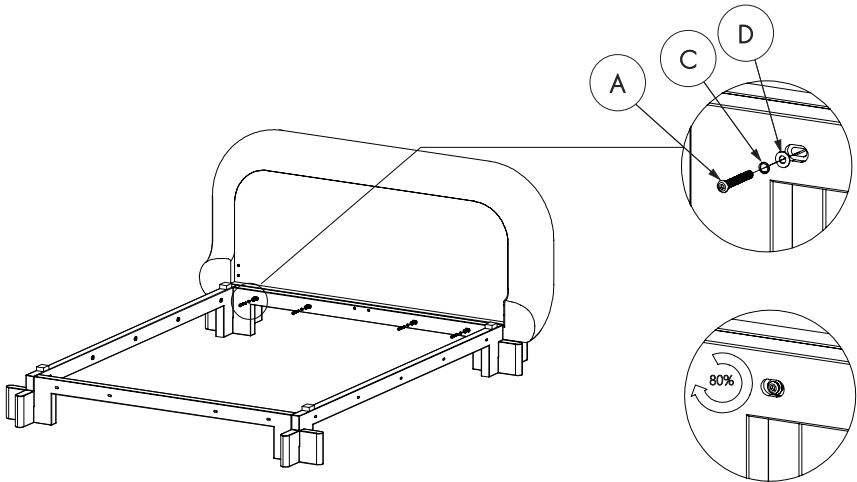

Step 4

Position keyhole bracket, then secure using 2x bolt (A), 2x spring washer (C) and 2x flat washer (E).

Fasten the bolts to about 80%.

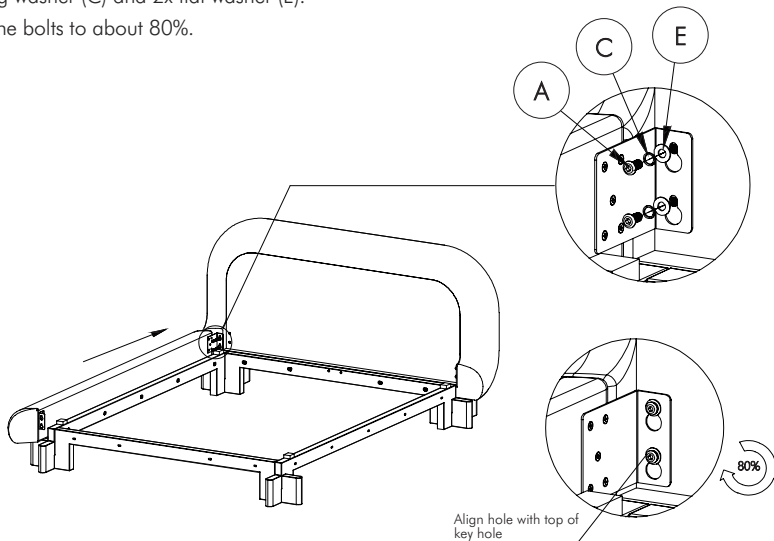


ELLISON STUDIOS.

Step 5

Attach the side rail to the timber frame using 5x bolt (A), 5x spring washer (C) and 5x flat washer (D).

Fasten the bolts to about 80%.


Repeat for the opposite side.

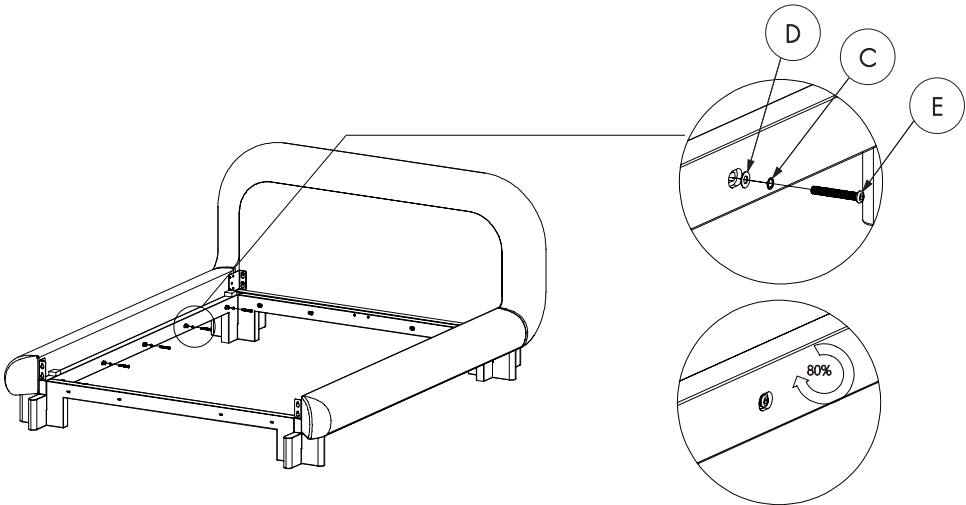

Step 6

Place the foot rail onto the unit. Ensure the holes on keyhole bracket align with holes on foot rail.

Position the foot rail and align all matching mounting holes.

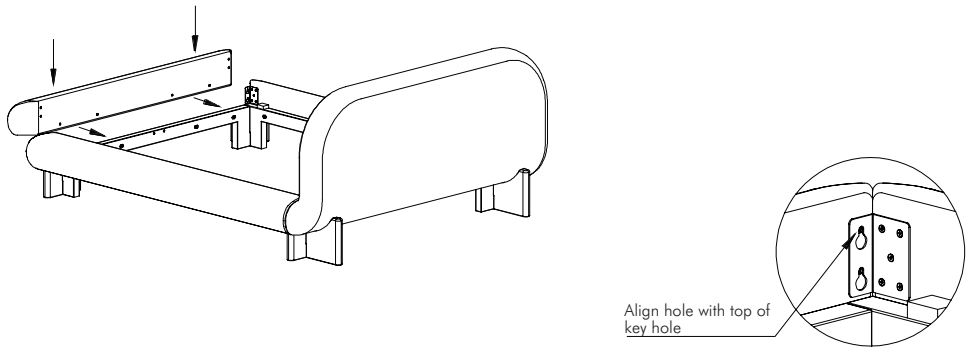


ELLISON STUDIOS.

Step 7

Secure the foot rail to the timber frame with 4x bolt (A), 4x spring washer (C) and 4x flat washer (D).

Fasten the bolts to about 80%.

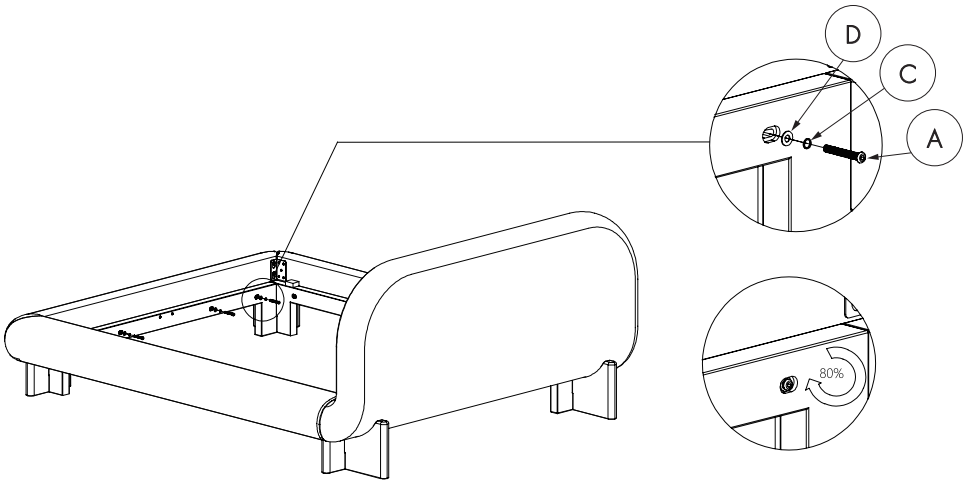


Step 8

Position keyhole bracket, then secure using 2x bolt (A), 2x spring washer (C) and 2x flat washer (E).

Fasten the bolts to about 80%.


Repeat for the opposite side.

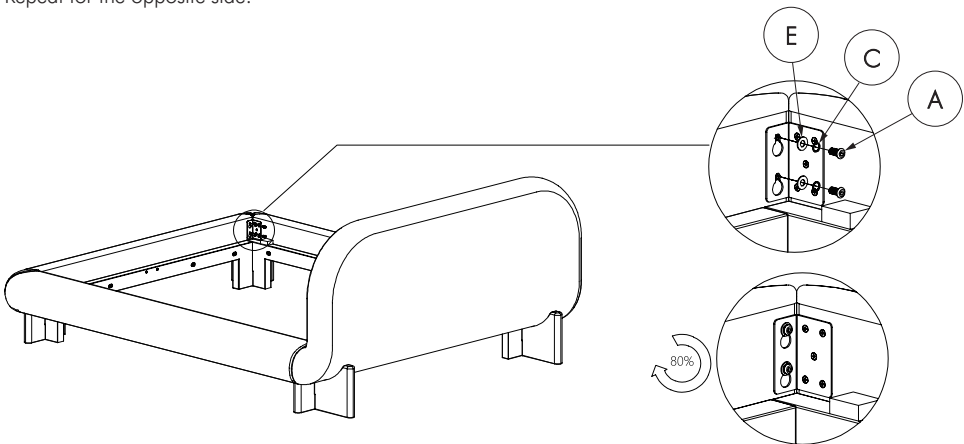

ELLISON STUDIOS.

Step 9


Once all components are fully aligned throughout the whole bed frame, tighten all bolts to 100% tension using the provided allen key.

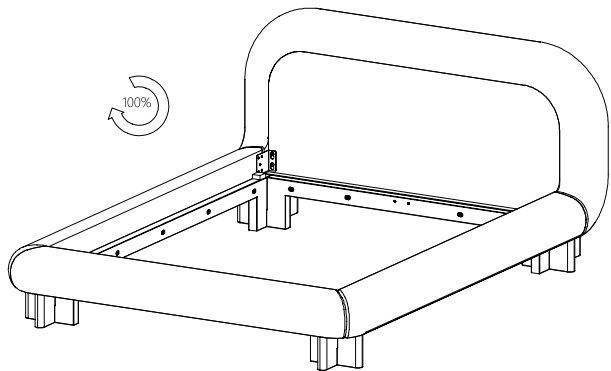

Step 10

Securely fasten all legs and lock washer (F) onto the centre rail as shown in the diagram.

Note that the legs can be adjusted to level the bed on uneven floors.

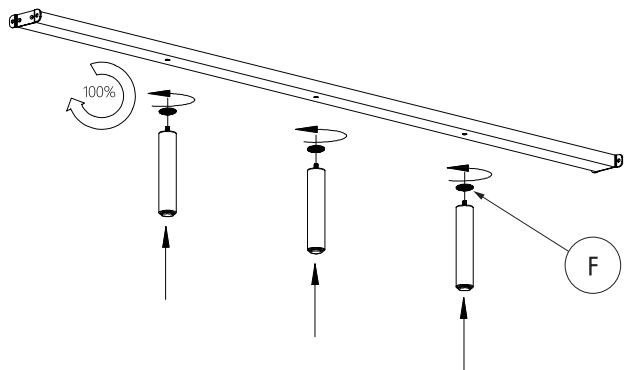


ELLISON STUDIOS.

Step 11


Attach the centre rail to the bed frame using 4x bolt (A), 4x spring washer (C) and 4x flat washer (E).

Tighten the bolts to 100%.

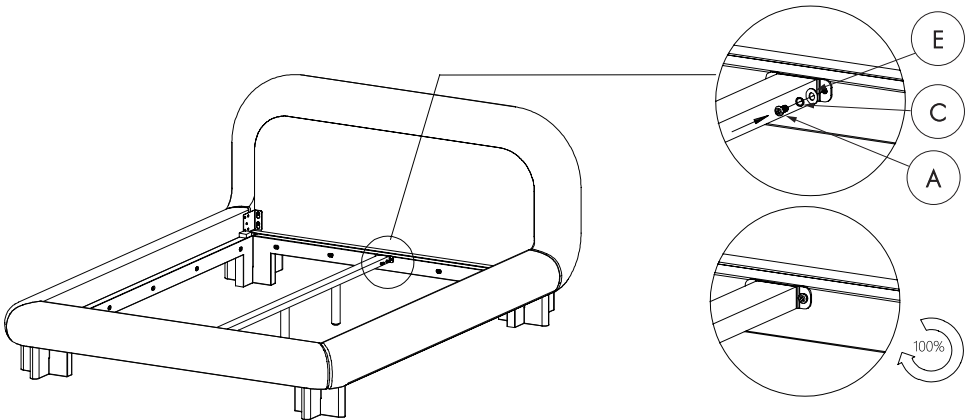

Step 12


Double-check all fixings and ensure no loose bolts remain on the bed assembly.

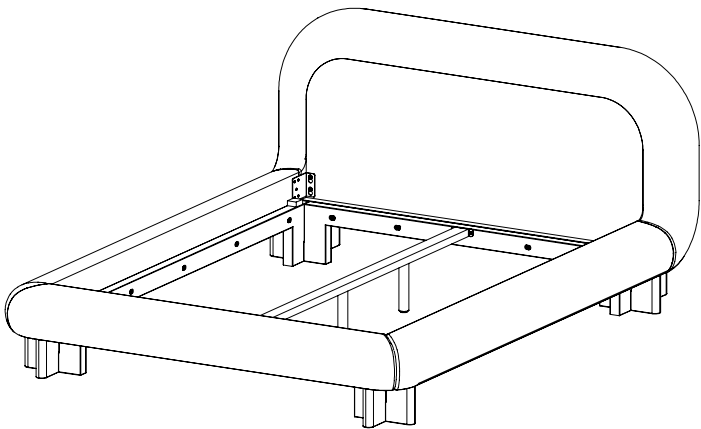

ELLISON STUDIOS.


Step 13

Unroll the bed slats across the bed frame from end to end. Using a screwdriver, secure each slat by inserting 48x screw (B) into the pre-drilled pilot holes along the slats.

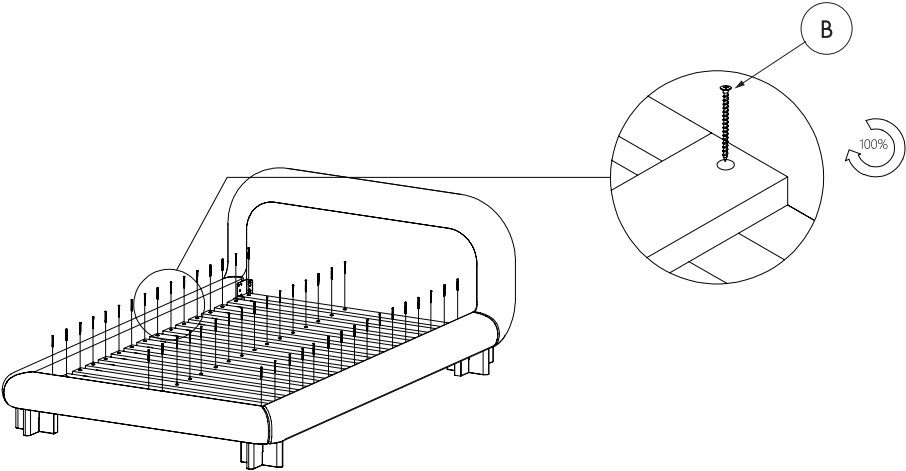

Step 14

Assembly complete.
Your bed assembly is now fully finished

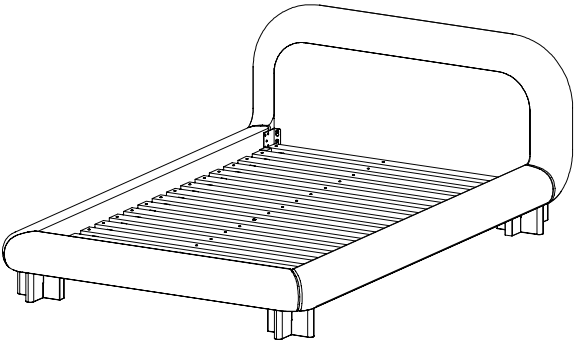

Blank Page